



Subject to corrections and printing errors. 2026 // 72994331 // UK

Keep your receipt, as proof of purchase is needed in case of warranty claims.

[www.morsoe.com](http://www.morsoe.com)



**Striato Toaster**  
Model: T3262AE

220-240V ~ 50/60Hz, 1370-1670W

**USER MANUAL - UK**

## PLEASE READ AND RETAIN THESE INSTRUCTIONS

Designed for everyday use, this toaster combines functionality with a calm and considered design.

To ensure safe and optimal performance, please read these instructions carefully before use.

### 1. SAFETY AND USE

- Read all instructions before using the appliance.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- The appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- If the power cord is damaged, it must be replaced by qualified personnel.
- Bread may burn. Always use the toaster with care and keep it away from flammable materials such as curtains or textiles.
- Never attempt to dislodge bread or other items using a metal object or utensil.
- The appliance is not intended for operation with external timers or remote-control systems.
- Failure to comply with the instructions for use may make the item unsuitable for use in contact with food.

#### This appliance is intended for everyday use in:

- Private homes
- Staff kitchens and workplaces
- Hotels, motels and similar residential settings
- Bed and breakfast environments
- Do not immerse the appliance, cord or plug in water or other liquids.
- Never leave the toaster unattended during operation.
- Always place the appliance on a stable, dry and level surface.
- Do not use outdoors.
- Disconnect the appliance from the power supply when not in use and before cleaning.
- Do not operate the appliance if it is damaged or not functioning correctly.
- Keep the cord away from hot surfaces and worktop edges.
- Surfaces may become hot during use – allow the appliance to cool completely before handling or storing.



### IMPORTANT

Only use this appliance as described in this manual.  
Disconnect the appliance, allow to cool and remove the item carefully.

- Ensure sufficient space around the appliance for adequate air circulation.
- Always use the toaster with the crumb tray in place and clean it regularly.
- Avoid toasting products with high sugar content or toppings such as jam, as they can burn and damage the appliance.

### 2. DESCRIPTION OF PARTS

- 2 variable-width toasting slots
- Removable crumb tray
- Adjustable toasting control
- Carriage control lever with high-lift function

### 3. PERFORMANCE

- Defrost function
- Reheat function
- Cancel function
- Automatically adjusted toasting time for consistent toasting
- 7 toasting settings
- High-lift function for easy bread removal
- Rated power 1370 - 1670W

### 4. OPERATION

#### Before First Use

- Remove all packaging materials and protective covers.
- Clean all parts that come into contact with food.
- Ensure that the power cord is not damaged before use.
- Check voltage compatibility.

Place the toaster in a well-ventilated area and operate it without bread for three cycles at toasting level 4.

Allow the appliance to cool for approximately 10 minutes between cycles.  
This process removes any residual manufacturing substances and ensures a neutral first use.

### Using the Toaster

- Connect the appliance to a suitable power supply.
- Place up to two slices of bread or similar bread products in the slots.
- Select the desired toasting level (1 = light, 7 = dark).
- Lower the carriage lever until it engages.
- The toasting cycle will begin automatically.
- The toaster will switch off and pop the bread up when the selected toasting level is reached.
- The process can be stopped at any time using the **Cancel** function.

### Defrost

- Use the Defrost function for frozen bread.

### Reheat

- Use the Reheat function to warm previously toasted bread without additional browning.

### High-Lift

- Raise the lever gently to remove smaller items safely.

### If Bread Becomes Stuck

Switch the appliance off and unplug. Allow to cool completely before carefully removing the bread without damaging the element.

- Disconnect from the power supply after use

### 5. COOKING GUIDE

Refer to the recommended operating times in this manual.

Do not exceed maximum capacities or cooking times.

### 6. CARE AND CLEANING

- Always disconnect the appliance and allow to cool before cleaning.
- Remove and empty the crumb tray regularly.
- Clean the exterior with a soft, slightly damp cloth and dry thoroughly.
- Do not use abrasive cleaning agents or scrub sponges on the non-metal parts, as they can scratch the surface.
- Do not immerse the appliance in water.
- To remove crumbs from inside the toaster, carefully turn it upside down and shake gently.
- Do not use sharp utensils

Regular cleaning ensures optimal performance and long life.

### 7. STORAGE

Store in a cool, dry and well-ventilated place.

### 8. SERVICING AND SAFETY

- Servicing must be carried out by authorised personnel only.
- Do not operate continuously for extended periods.
- Inspect your toaster regularly. If there are any signs of damage to the product, such as cracks, tearing, corrosion or other potential defects, please refrain from using it any further. Contact the location where you have bought the product to evaluate whether it is still safe to use.

### 9. TECHNICAL INFORMATION

- Power consumption (OFF mode): 0W
- Period after which the equipment reaches automatically OFF mode: 0 minute

### DISPOSAL

This product must not be disposed of with household waste.

Please return it to an appropriate collection point for recycling in accordance with local regulations.

Morsø Jernstøberi A/S  
Furvej 6, DK-7900 Nykøbing Mors

www.morsoe.com  
info@morsoe.com